

FABRIC CLEANING

DON'T

- Do not spray water or a cleaner directly on the fabric. Fabrics often have a water-based coating that begins to dissolve when any liquid is applied. The dissolving of the coating will leave a noticeably discolored “ring” on the fabric.
- Do not dry clean.
- If machine washed, do not dry using high heat.

DO

- Whenever possible, remove the cover from the frame and lay on a dry clean surface.
- Make sure your hands are clean and/or wear gloves.
- Work from the outer edges toward the center of the spot.
- Try removing dirt/dust by blowing the area with an air hose or wiping/rubbing it with a Magic Eraser, rag or soft brush.
- For tougher spots, wipe/rub the spot using a Magic Eraser, rag or soft brush that is **very lightly dampened** (preferably distilled water or a fabric cleaner such as Shout). **“Very lightly dampened”** means there is almost no perceivable moisture when touching the Magic Eraser, rag or soft brush and if squeezed, no liquid would drip.
- If washing the cover, use a commercial size front-loading washing machine and wash on as gentle cycle with cool water. It is important graphics with zippers be zipped during washing. When drying, use air or low heat and dry until damp. While the cover is damp, apply it to the frame to let the cover finishing drying, this helps prevent the fabric from shrinking and becoming difficult to install.