

FLYING BANNERS Feather & Blade

INSTRUCTION SHEET

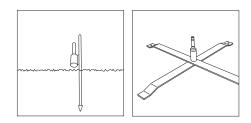


Hammer the sharpened end of the ground stake into the ground or unfold the hard suface stand.

Tip: To allow the banner to rotate in the wind leave a 2" ground clearance. (see below)

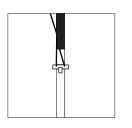

Attach the banner clip to the attachment point on the large pole.

Note: To help reduce wrinkles and create optimal banner tension, you may need to tighten or loosen the bungee.

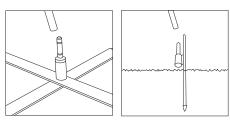


Ζ


Connect the poles by inserting each small pole

into the next larger size pole.

 5 Slide the pole over the




 3 Slide the sleeve over the pole until tight. Make sure tip of pole is at the end of the sleeve.



post on the stand.

TEARDROP

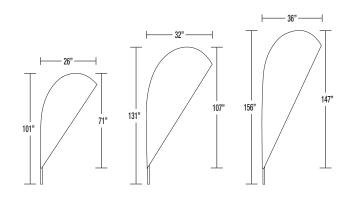

BOW FLAG

