Light Blanket Power Supply Replacement



Identify the power supply that needs to be replaced. Unplug Lightblanket.





Unplug the power supply from the LED lights.





Cut plastic lock securing power supply to fabric.





Remove the power supply.

5



Insert a new plastic spine into the light blanket.

6




Side lock down plastic spine to secure the new power supply to the fabric.



Reconnect the power supply to the LED light. Press until you hear it click.

8

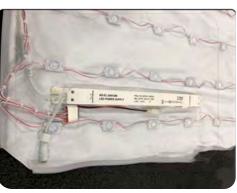

Plug-in light blanket and test to make sure new power supply works.